

Chimney user guide

Fire prevention – important advices before implementing

- It is not permitted to shelve flammable objects in front of the chimney – distance from the chimney min. 80 cm.
- The usage is not permitted, if the couch is extended.
- During the usage of the chimney, it is not permitted to use the cooker hood - **danger of poisoning!**
- Only wood is permitted for burning.

Implementing

1. For the combustion air, pull the white hand gear completely out.
2. Put (open) the air control to the left.
3. All four ventilation grids have to be completely opened.
4. In flame the layered wood.
5. Close the door fast.



Usage

- After the wood is totally burned and a basic firebed is built, the combustion air can be regulated by the air control. ②

Adding new wood

- Open the door slowly
- Be careful, the control is going to be hot. Please use the gloves for opening
- Don't add too much at once!